

# DS20

TFT LCD THROTTLE  
FOR E-SCOOTER  
**MANUAL**




Scan this QR Code to  
Find Supports




SEP 2023

# Home Page *D*

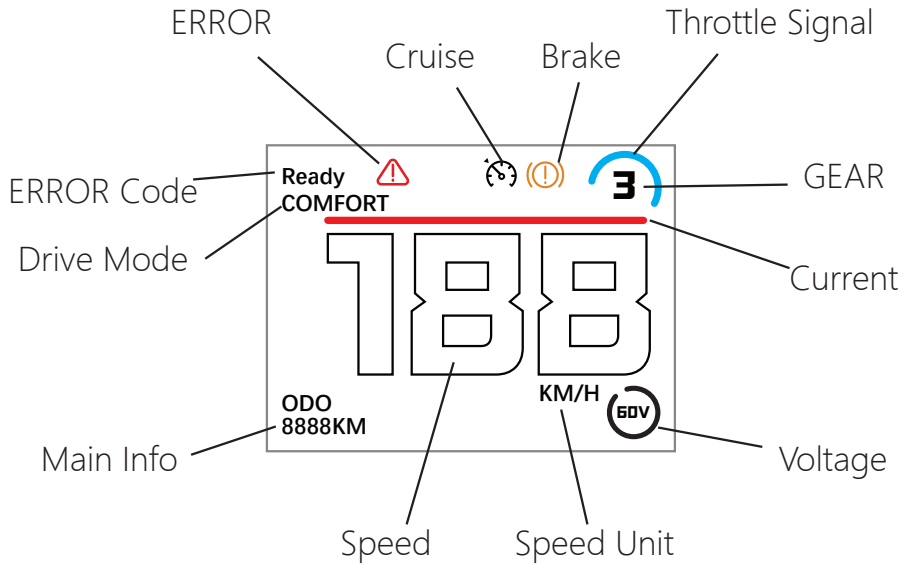

# Button Function <sup>D</sup>

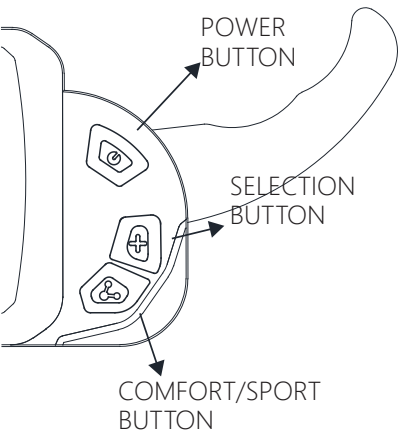

LONG PRESS:  
CLICK:

Power ON/OFF  
Switch



CLICK at HOMEPAGE:  
CLICK at HOMEPAGE with Bright:  
CLICK at P menu:

Switch GEAR 1/2/3  
Choose Brightness  
Select Parameter



LONG PRESS:  
Enter P menu/Quit and Save P menu



CLICK at P menu: Select Parameter  
CLICK: COMFORT/SPORT MODE

# P MENU <sup>D</sup>

P01	1-5	Screen Brightness. 1Lowest, 5Highest
P02	KM/MILE	Speed unit
P03	48-72V	Voltage
P04	5-60min	Sleep Mode Timer in Minutes
P05	n/a	n/a
P06	6.0-30.0inch	Wheel Diameter
P07	2-60	Motor Pole
P08	0-5-40	Speed Limit
P09	enabled/disabled	Non Zero Start. Push to GO.
P10	n/a	Drive Mode.
P11	n/a	PAS sesitivity. NO FUCTION on Escooter.
P12	0-5	E-brake. 0=No e-brake, 1=soft e-brake, 5=Strong e-brake.
P13	n/a	n/a
P14	n/a	n/a
P15	n/a	n/a
P16	Reset	ODO reset
P17	enabled/disabled	Auto Cruise.
P18	50-150	Speed Calibration.
P19	n/a	n/a
P20	n/a	n/a
T01	±45%	COMFORT Slope
T02	40-100	COMFORT max throttle percentage
T03	±45%	SPORT Slope

# ERRO CODE List *D*

E00	(1)Display and controller is not compatible (2)default Error
E06	Low Battery Voltage
E07	Bad Motor Hall Sensor
E08	Bad Throttle
E09	Bad Controller
E10	Bad Connection between display and controller
E11	Bad Connection between display and controller
E12	Bad BMS Communication
E13	Bad lights



Scan this QR Code to  
Find Supports